

Work Order ID 76416

November-14-11 10:34:41 AM

76416

Page 1

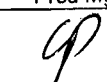
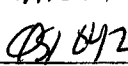
Item ID: D205-634-011 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Skidtube
 Start Date: 14/11/2011 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 28/11/2011 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: M.L.J Date: 11/11/14 Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr								
IIN D205-634	Rev F								
100		0.00							
100									
DC		0.00							
Document Control	*PTD	Memo							
		Photocopy bluefile & type labels per PPP D205-634-011							
		CHG 007 CHG 010							
110	Pick Kit	0.00							
110									
Packaging		0.00							
Packaging									
120	QC4- 100% Inspect kits for completeness	0.00							
120									
QC		0.00							
Quality Control									
		Memo							
		Swags a-bolt							
		Spacers							

74899

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector
11.12.14	100	KIT @ CHG 010 FOR SWAGED SKIDTUBE				 11.12.14 	

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Work Order ID 76416

76416

Page 2

November-14-11 10:34:41 AM

Item ID: D205-634-011

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Skidtube

Start Date: 14/11/2011 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 28/11/2011 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130		0.00							
130									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D205-634-011								
	Location: _____								
	PPP rev: _____								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

11/12/14

11/12/14

mf 11-12-14

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: _____ PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

November-14-11 10:34:45 AM

Page 1

Work Order ID: 76416

76416

Parent Item: D205-634-011

D205-634-011

Parent Item Name: Skidtube

Start Date: 14/11/2011

Required Date: 28/11/2011

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:P02.08.28Removed QC5 from Step 5KJ
IPP Rev:Q 08-08-12 now @ chg 006 (DSI 9417) DD verf:EC
IPP Rev R 09.01.28 now chg 007 DSI9417 revB EC verf:DD IPP Rev:S
10.12.01 as per chg008 DD verf:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D205-634-041		Manufactured	No			110	Each	4.0000	1	1			
D205-634-041									**				
Replacement Skidtube													

74899

Location

Loc Qty

Loc Code

FG

-1

56133

0

56134

0

56135

0

56136

0

56137

0

56565

0

56566

0

FG073

5

72092

1

72290

1

72859

1

72860

1

K10003 CH4007

Manufactured No

110

Each

0.0000

1

1

K10003

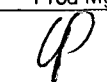
Saddle, D205-634-011

**

77185

11/12/11

MUST USE EITHER
BIN 74897
74898
74899
74901
★ PTO 11.12.11

W/O: 76416		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector
11.12.14	110	MUST USE D205-634-041 @ CHG 005				 11.12.14 05/642	

Part No: D205-634-011 PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries